



## **ASSEMBLY INSTRUCTIONS**

Conference table ELLA480 / ELLA480i





## PARTS LIST


No.	Accessories / Single parts		ELLA480	ELLA480i
1	Sheet metal	00000	4 x	4 x
2	Connector	A CONTRACTOR	8 x	8 x
3	L20 round head screw		48 x	48 x
4	Short end rod		4 x	4 x
5	Frame rod		6 x	6 x
6	L40 flat head screw	Communities and the second sec	16 x	16 x
7	Cover for bar end		4 x	4 x
8	Middle stand		2 x	2 x
9	Side stand		2 x	2 x
10	Table top holder	$\bigcirc$	16 x	16 x


No.	Accessories / Single parts	ELLA480	ELLA480i
11	Screw for table top holder	16 x	16 x
12	Lateral table top	2 x	2 x
13	Middle table top	1 x	1 x
14	Phillips screw	74 x	74 x
15	Mounting material induction boxes	3 x	3 x
16	Induction box	-	3 x
17	Cable cover	3 x	-
18	Cable guide	4 x	4 x


## ASSEMBLY

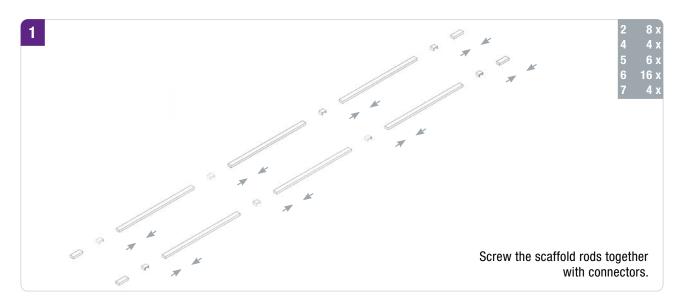


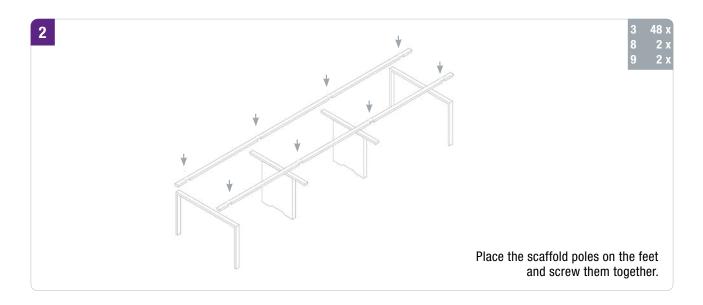


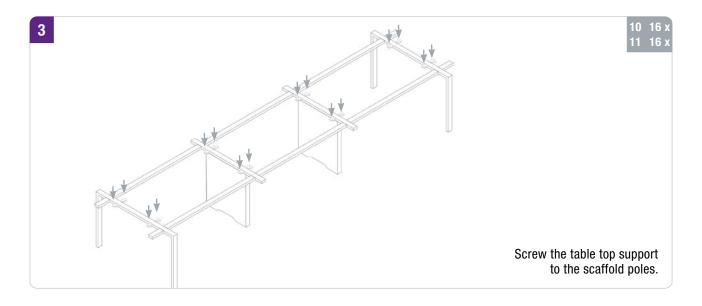

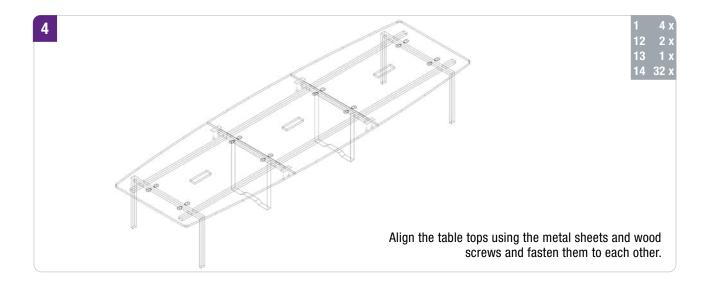

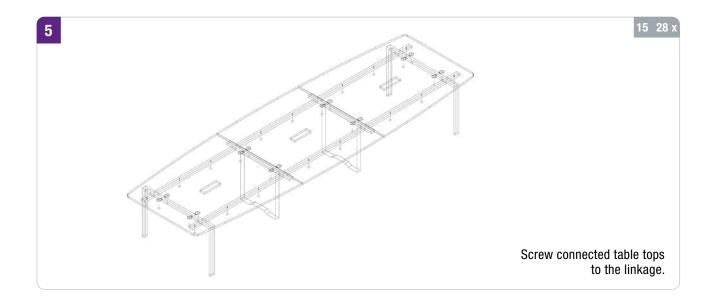

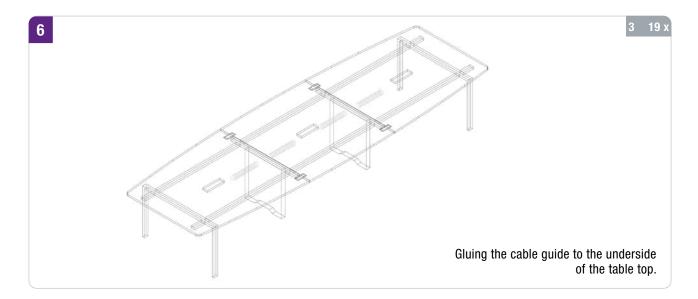

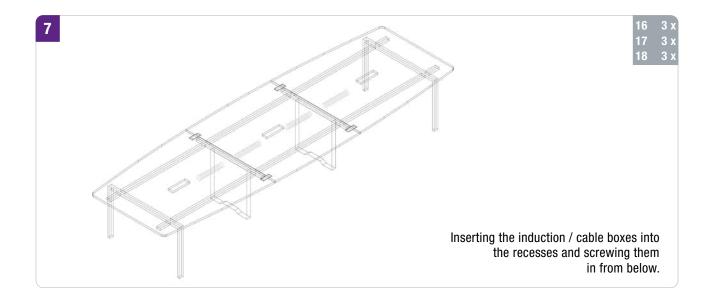

## **SERVICE & CONTACT**

Contact our product experts and find help and solutions for your product. Here you will find all contact information listed by country and language: <u>www.topregal.co.uk/en/service</u>

Responsible for the content: TOPREGAL GmbH Industriestrasse 3 70794 Filderstadt GERMANY www.topregal.com



V 09.03.23