



OPERATING INSTRUCTIONS

Large ramp



Please read this manual before using the product and follow the instructions it contains!

GENERAL

Area of application	3
Safety instructions	3
Technical data	3
Operator obligations	4
Assembly	4
Transport	4

MAINTENANCE

Maintenance	4
Service & contact	5
UKCA Declaration of Conformity	6

AREA OF APPLICATION

Ramps are used for loading and unloading, as well as for driving over thresholds with a forklift truck. To ensure safe handling, please also always observe the operating instructions of the forklift.

SAFETY INSTRUCTIONS




WARNING! Risk of injury in case of misuse!

Incorrect use of the ramp can lead to dangerous situations and serious injuries.

- Make sure that there are no persons or obstacles in the danger zone.
- Never exceed the maximum permissible load capacity of the ramp.
- Observe the specifications in the technical data sheet.
- Secure the ramp against slipping with the safety chains.
- Make sure that the ramp is only used on clean and level surfaces.
- The ramp may only be used by competent and authorised personnel.
- The folding wedge must rest securely and in full width on the loading surface during the entire loading process.
- Only use the ramp at an ambient temperature of -20 °C to +40 °C.
- No modifications may be made to the ramp without the manufacturer's consent.
- Observe all the regulations and rules applicable to your ramp, including those relating to occupational safety.
- Store the ramp in a clean, dry and safe place.
- According to DGUV regulation 68, periodic inspections must be performed at least once a year with checklist FEM 4.004, 6.

TECHNICAL DATA

Type	Unit	Value
Brand		SolidHub
Color		RAL 5005
Surface		Painted
Weight	kg	275
Material thickness	mm	4
Load capacity	kg	6500
Drive-up height	cm	10 - 25
Height	cm	8
Length	cm	200
Width	cm	220
Size of fork openings	mm	165 x 60

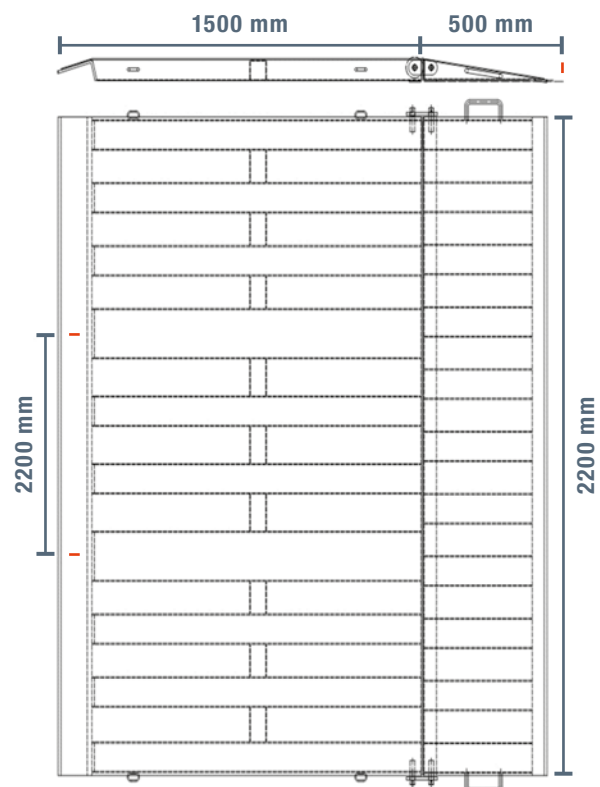

OPERATOR OBLIGATIONS

Ramps are used in the commercial sector. The operator of the industrial truck is therefore subject to the legal obligations for occupational safety.



WARNING! Risk of injury due to crushing!

The weight of the ramp can cause crushing and serious injuries. Protective gloves and safety shoes must therefore be worn when securing and transporting.

ASSEMBLY

The ramp is delivered in two parts. Be careful of your extremities and wear gloves when assembling. There is a risk of crushing!

1. Place the two individual parts together to fit and join them together.
2. Insert the second safety bolt on both sides and fasten them.
3. Carefully fold down the smaller end of the ramp if you want to transport it with a forklift truck. When doing so, hold the ramp by the handles provided.



TRANSPORT

Carefully drive the forklift into the fork openings (165 x 60 mm) provided on the ramp and lift it. Make sure that the ramp is secured against slipping at all times. To do this, tilt the forks slightly towards the forklift truck.

MAINTENANCE

- Daily visual inspection by the user.
- Check the ramp for cracks or deformations.
- Have the ramp inspected at least once a year by an expert based on the current relevant standard.
- Clean the ramp regularly. Use a broom or brush for this purpose.
- Remove dirt or rust with suitable tools.

The respective inspection points (plus equipment identification) for the periodic inspections/thorough examinations are to be checked in an integrated manner in the associated inspection report of the lifting equipment, taking into account the mandatory fulfilment of the Lifting Operations and Lifting Equipment Regulations 1998 (LOLER). (Recommendation: FEM4.004)

SERVICE & CONTACT

Contact our product experts and find help and solutions for your product. Here you will find all contact information listed by country and language: www.topregal.com/en/service

Responsible for the content:

TOPREGAL GmbH

Industriestrasse 3

70794 Filderstadt

GERMANY

www.topregal.com

UKCA Declaration of Conformity

The manufacturer

TOPREGAL UK Ltd.
Carlton Drive Crumlin
Gwent NP11 4EA

hereby declares that the following product

Product name:

Type:

Ramp

GR2000

Serial number:

GR2000-1000000000 - GR2000-9999999999

that the equipment is in conformity with the following relevant UK legislations and applied standards:

Supply of Machinery (Safety) Regulations 2008
Electrical Equipment (Safety) Regulations 2016

EN ISO 12100
EN 60204-1

Name and address of the person who is authorized, compile the technical documentation:

TOPREGAL UK Ltd.
Carlton Drive Crumlin
Gwent NP11 4EA



Place: Crumlin UK
Date: 01.03.2021

Juergen Effner
Chief Executive Officer

SolidHub