



INSTRUCTIONS MANUAL

Ramp

GR1200



Please read this manual before using the product and follow the instructions it contains!

AREA OF APPLICATION

Ramps are used for loading and unloading, as well as for driving over thresholds with a forklift truck. To ensure safe handling, please also always observe the operating instructions of the forklift.

SAFETY INSTRUCTIONS




WARNING! Risk of injury in case of misuse!

Incorrect use of the ramp can lead to dangerous situations and serious injuries.

- Make sure that there are no persons or obstacles in the danger zone.
- Never exceed the maximum permissible load capacity of the ramp.
- Observe the specifications in the technical data sheet.
- Secure the ramp against slipping with the safety chains.
- Make sure that the ramp is only used on clean and level surfaces.
- The ramp may only be used by competent and authorised personnel.
- Only use the ramp at an ambient temperature of -4 °F to +104 °F.
- No modifications may be made to the ramp without the manufacturer's consent.
- Observe all the regulations and rules applicable to your ramp, including those relating to occupational safety.
- Store the ramp in a clean, dry and safe place.
- We recommend an annual inspection. Check with your local authorities for applicable safety regulations regarding forklift and forklift accessories.

TECHNICAL DATA

Type	Unit	Value
Brand		SolidHub
Surface		Painted
Weight	lbs	319.67
Material thickness	"	0.2
Load capacity	lbs	13,007.27
Drive-up height	"	3.94 – 9.84
Height	"	8.86
Length	"	47.24
Width	"	59.06

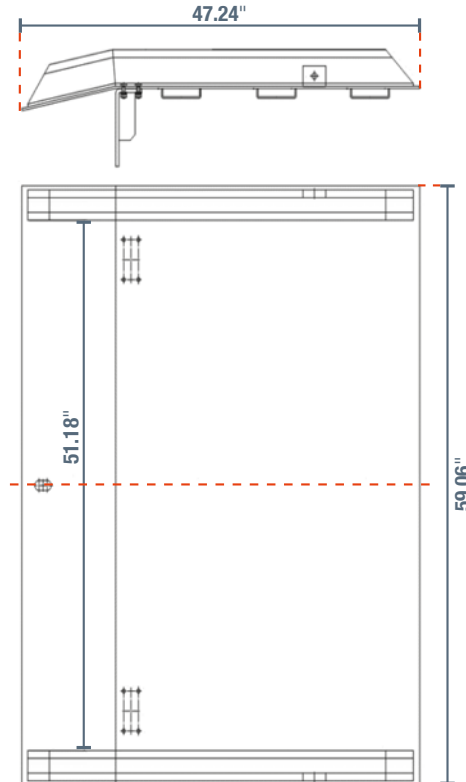

OPERATOR OBLIGATIONS

Ramps are used in the commercial sector. The operator of the industrial truck is therefore subject to the legal obligations for occupational safety.



WARNING! Risk of injury due to crushing!

The weight of the ramp can cause crushing and serious injuries. Protective gloves and safety shoes must therefore be worn when securing and transporting.

ASSEMBLY

The ramp is supplied with two feet, 8 bolts, 8 nuts, 8 washers and 8 spring washers. Be careful of your extremities and wear gloves when assembling the feet. There is a risk of crushing!



TRANSPORT

Carefully pick up the ramp with the forklift truck on the safety chain. Make sure that the ramp is secured against slipping at all times. To do this, tilt the forks slightly towards the forklift.

MAINTENANCE

- Daily visual inspection by the user.
- Check the ramp for cracks or deformations.
- Have the ramp inspected at least once a year by an expert based on the current relevant standard.
- Clean the ramp regularly. Use a broom or brush for this purpose.
- Remove dirt or rust with suitable tools.

SERVICE & CONTACT

Contact our product experts and find help and solutions for your product. Here you will find all contact information listed by country and language: www.topregal.us/en-us/service

Responsible for the content:
 TOPREGAL US Corp.
 729 North Route 83, Suite 309
 Bensenville, IL 60106
 United States of America
www.topregal.us

SolidHub