



OPERATING INSTRUCTIONS

Load hook
LH1000



Please read this manual before using the product and follow the instructions it contains!

GENERAL

Area of application	3
Intended use	3
Duties of the operator	3
Technical data	4
Assembly instructions	4
Operating instructions	4

MAINTENANCE

Maintenance	5
Repairs	5
Service & Contact	5
UKCA Declaration of Conformity	6

AREA OF APPLICATION

Load hooks are used to pick up heavy goods and transport them with a forklift truck. To ensure safe handling, please always observe the operating instructions of the forklift truck.

INTENDED USE

**WARNING! Risk of injury if used incorrectly!**

Misuse of a load hook can lead to dangerous situations and serious injuries. In such cases, there is a danger to life and limb.

The load hook is used exclusively for picking up and transporting loads and may only be used on pallet trucks and counterbalanced trucks with a suitable fork size and lifting weight.

- Make sure that there are no persons or obstacles in the danger zone.
- Never exceed the maximum permissible load capacity of the load hook and the forklift truck.
- Observe the information in the technical data sheet.
- Do not use the load hook if it is damaged.
- Modifications and alterations to the device not authorized by the manufacturer will invalidate the warranty.

DUTIES OF THE OPERATOR

Load hooks are used in the commercial sector. The operator of the forklift truck is therefore subject to statutory occupational safety obligations.

Risk of injury due to crushing! The weight of the load hook and the attached load can cause crushing and serious injuries. Protective gloves must therefore be worn during assembly and disassembly.

In accordance with DGUV regulation 68, periodic inspections must be carried out at least once a year using checklist FEM 4.004 under point 6.





Note that using the load hook shifts the load center of your forklift truck. For more information, refer to the load diagram and the center of gravity of your device.

Check whether the load hook is compatible with your forklift truck (fork tine cross-section up to max. 150 x 60 mm).

TECHNICAL DATA

Type	Unit	Value
Colour		Blue
Surface		Lacquered
Depth	mm	280
Height	mm	380
Width	mm	160
Weight	kg	8
Max. load	kg	1000
Dimensions fork pockets	mm	150 x 60

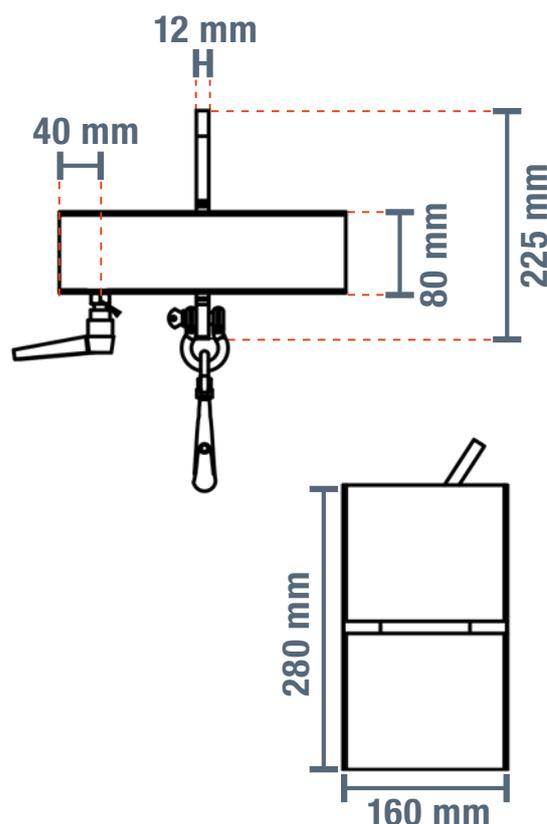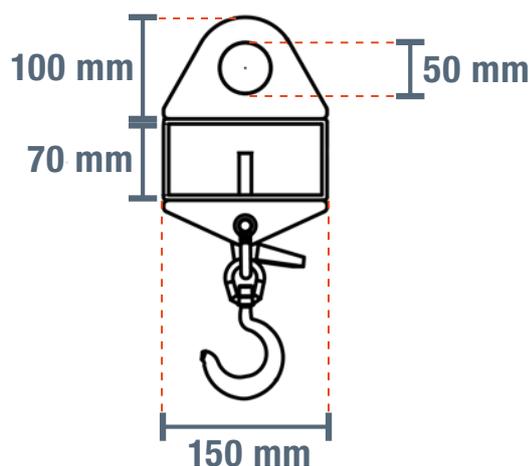

ASSEMBLY INSTRUCTIONS

1. Loosen the screw clamp of the load hook.
2. Carefully slide the load hook onto a fork tine so that it lies completely on the fork.
3. Tilt the fork towards the forklift truck to prevent it from slipping. Never tilt the fork forwards when using the load hook.
4. Tighten the screw clamp.
5. Check that the load hook is secured.

OPERATING INSTRUCTIONS

1. Secure the goods to be transported with the hook.
2. Lift the goods slowly and make sure that there are no people in the danger zone.
3. Make sure that the goods are lifted evenly, do not sway too much and hang parallel to the floor.
4. Lift the goods to transport height, but as close to the ground as possible.
5. Transport the load to the desired location. Drive slowly and avoid uneven surfaces and slopes.
6. Carefully lower the goods at their destination and release them from the hook.



Stop the operation of your lifting device immediately using the emergency stop switch if it threatens to tip over.

MAINTENANCE

- Perform a daily visual inspection.
- Check the tight fit of the screw clamp and check for cracks or deformations.
- Have the load hook checked at least once a year by an expert on the basis of the currently applicable standard.
- Clean the load hook regularly. Use a broom or brush to do this.
- Remove dirt or rust with suitable tools.

REPAIRS

Repairs may only be carried out by the manufacturer or a specialist company authorized by the manufacturer. The manufacturer accepts no liability for any damage resulting from improper repair or welding work. Improper repairs or the use of third-party components can lead to damage and loss of function. This can lead to dangerous situations and serious injuries.

SERVICE & CONTACT

Contact our product experts and find help and solutions for your product. Here you will find all contact information listed by country and language: www.topregal.co.uk/en/service

Responsible for the content:
TOPREGAL GmbH
Industriestrasse 3
70794 Filderstadt
GERMANY
www.topregal.com

UKCA Declaration of Conformity

The manufacturer

**TOPREGAL UK Ltd.
Carlton Drive Crumlin
Gwent NP11 4EA**

hereby declares that the following product

Product name:

Load hook

Type:

LH1000

Serial number:

LH1000 -1000000000 – LH1000-9999999999

that the equipment is in conformity with the following relevant UK legislations and applied standards:

2006/42/EG Machinery Directive

EN ISO 12100

Name and address of the person who is authorized, compile the technical documentation:

TOPREGAL UK Ltd.
Carlton Drive Crumlin
Gwent NP11 4EA


Place: Crumlin UK
Date: 25.12.2023



Juergen Effner
Chief Executive Officer

TOPREGAL

TOPREGAL

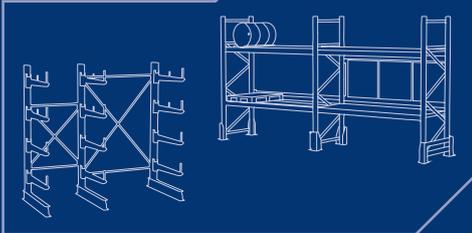

SolidHub



WIPEKET



TECMASCHIN



SOLOPORT

