



# **ASSEMBLY INSTRUCTIONS**

Lockers MS1100/3



i

COMPONENTS	Components & assembly materials	3
ASSEMBLY	Door frame & side walls	5
	Inner walls, bottom & back	6
	Lid, shelves & doors	7

#### Local accident prevention regulations

All local accident prevention regulations apply:
generally recognised safety rules
country-specific regulations

- storage guidelines for facilities and equipment of the respective country •


#### Maximum load per shelf


• A maximum load of 40 kg applies to all shelves

Screws must not be overtightened!


i

### **COMPONENTS & ASSEMBLY MATERIALS**

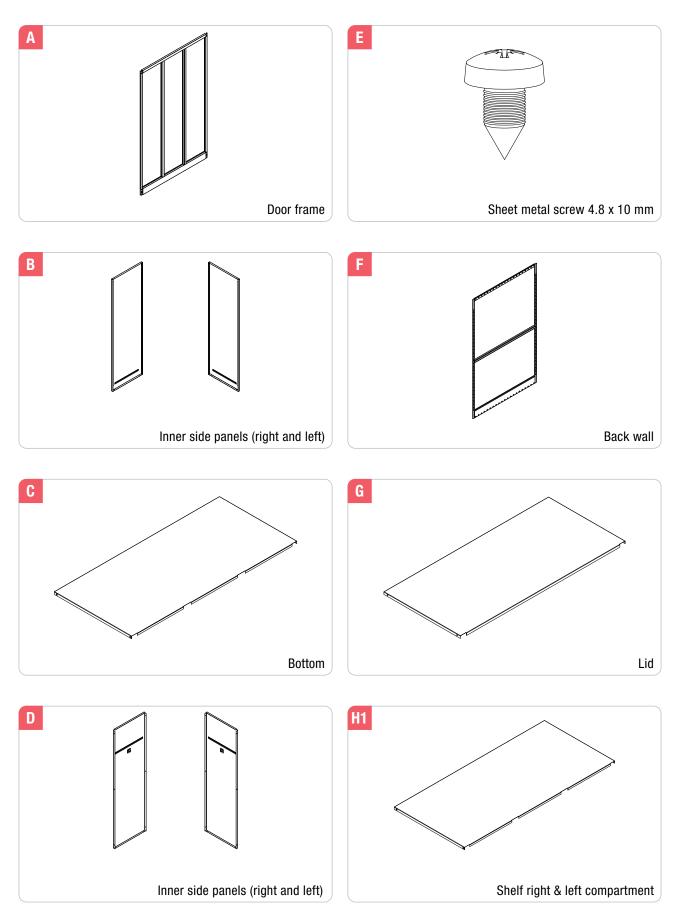

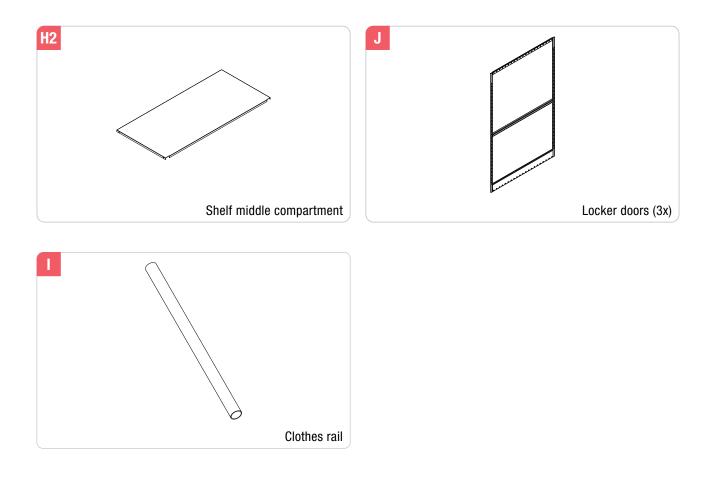


# DOOR FRAME & SIDE WALLS

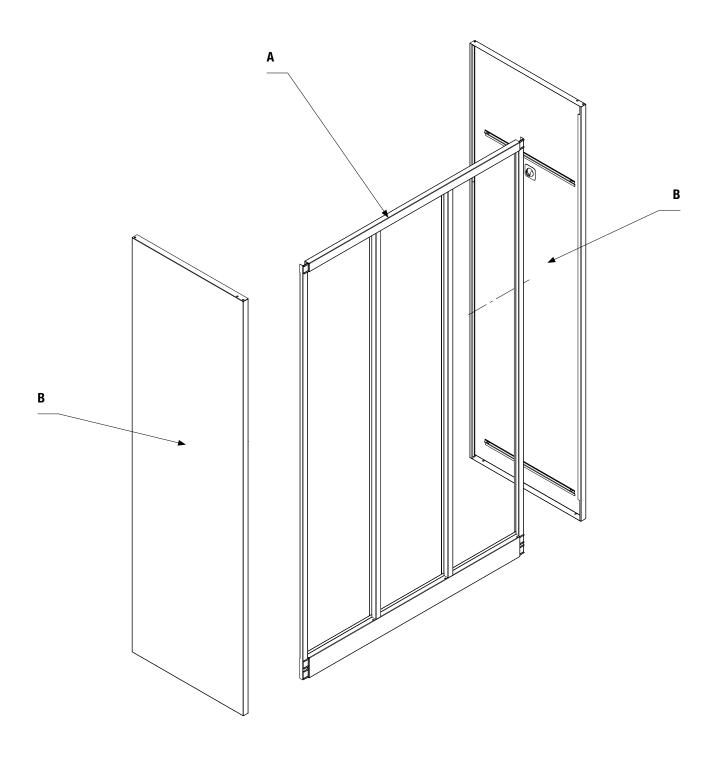


1. Hang the side walls B on the door frame A.

# INNER WALLS, BOTTOM & BACK

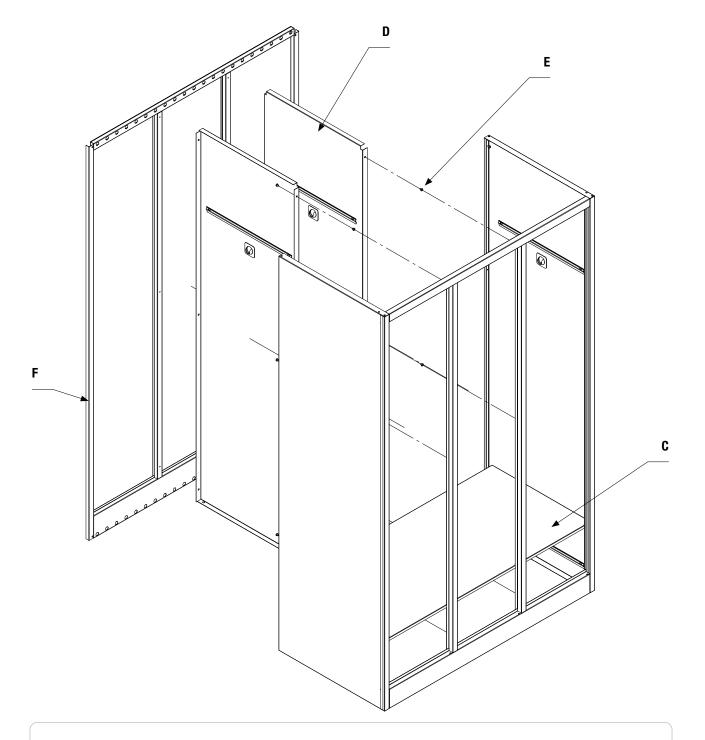

- 1. Insert the bottom C into the framework of side walls & door frame.
- 2. Insert the inner side panels D into the frame and screw them in place with the screws E.
- 3. Then place the back wall F on the assembled frame.

### LID, SHELVES & DOORS

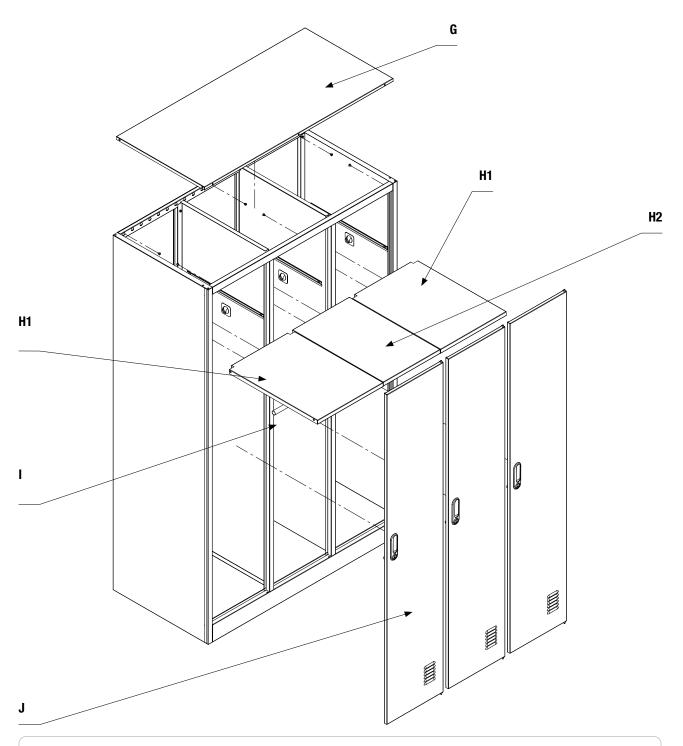

- 1. Fit the cover G on top of the locker and screw it in place with the screws E.
- 2. Slide the shelves H1 and H2 into the rails provided.
- 3. Insert the clothes rail I into the holder.
- 4. Put in the locker doors J.



Contact our product experts and find help and solutions for your product. Here you will find all contact information listed by country and language: <a href="https://www.topregal.co.uk/en/service">www.topregal.co.uk/en/service</a>

Responsible for the content:

TOPREGAL GmbH Industriestraße 3 70794 Filderstadt GERMANY www.topregal.com