



## ASSEMBLY INSTRUCTIONS

Multifunctional workbench

MFW1000



Please read this manual before using the product and follow the instructions it contains!

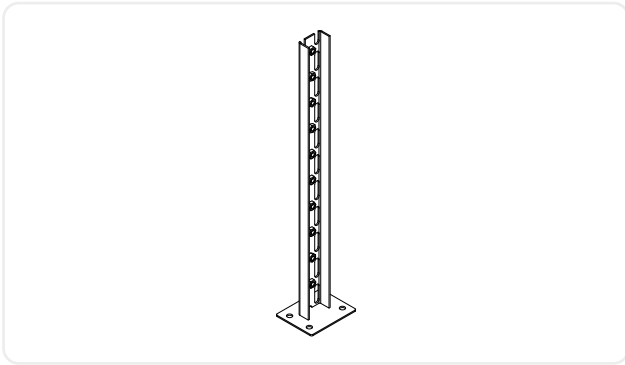
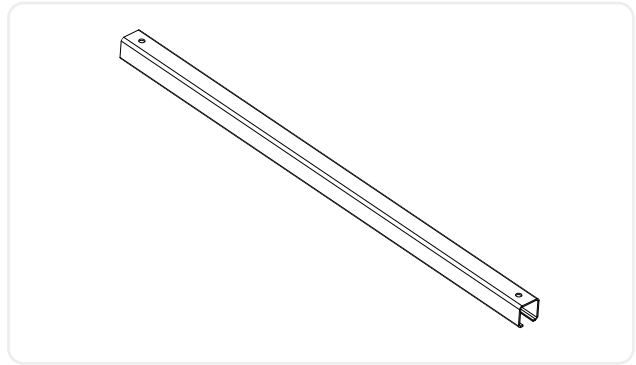
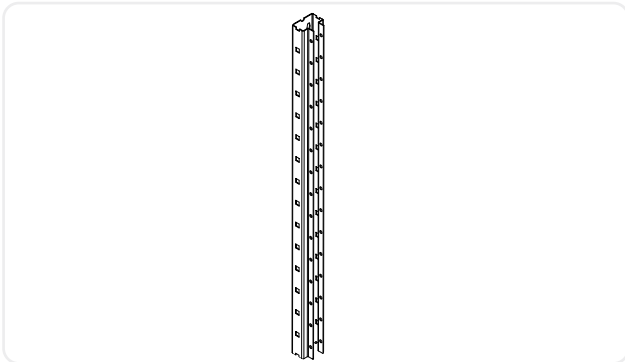
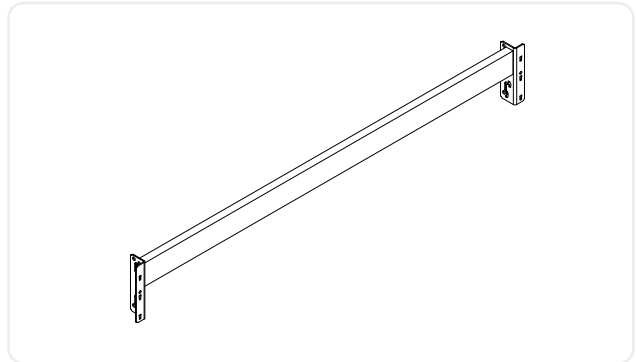
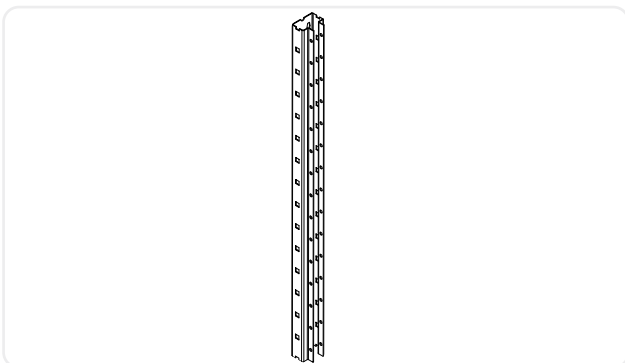
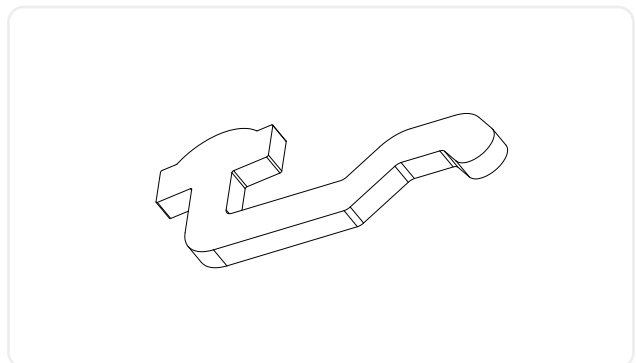
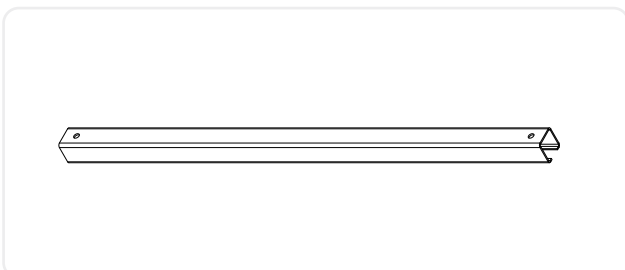
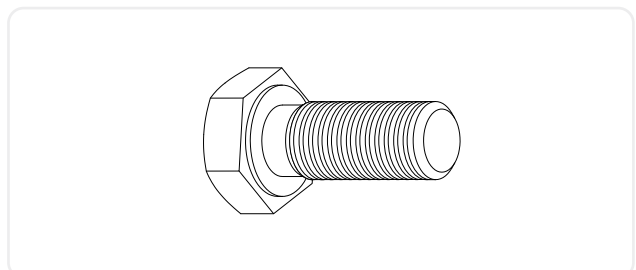
<b>PARTS LIST</b>	Parts list	3
<b>ASSEMBLY WITH BACK PANEL</b>	Upright assembly Assembly of back panel, covers & beams Shelf assembly Cabinet modules assembly	6 7 8 9
<b>ASSEMBLY WITHOUT BACK PANEL</b>	Upright assembly Beam & shelf assembly Cabinet modules assembly	10 11 12
<b>ASSEMBLY MOBILE</b>	Assembly of castors & handles Service & Kontakt	13 14


















**Do not over-tighten screws!**

Screws are first hand-tightened and only tightened after the entire frame has been assembled – using suitable tools such as a cordless drill or a wrench.


## PARTS LIST

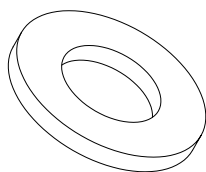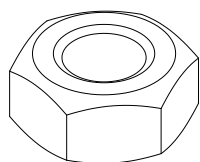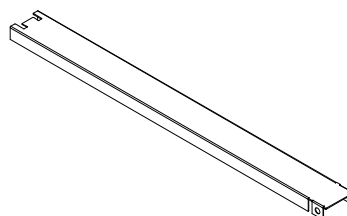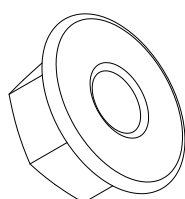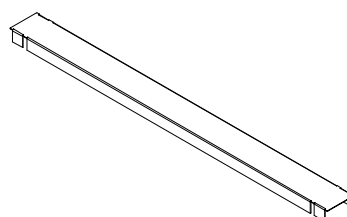**A** Height-adjustable foot part**E** Diagonal brace**B** Upright profile 750 mm**F** Beam**C** Upright profile 1250 mm for back panel**G** Safety pin**D** Cross brace**H** M8 x 20 mm screw

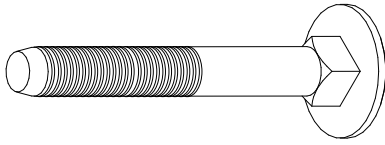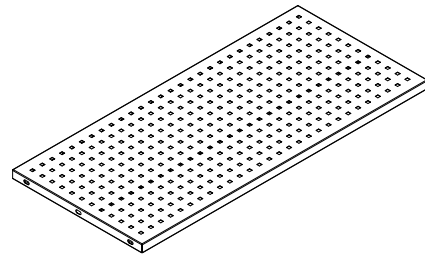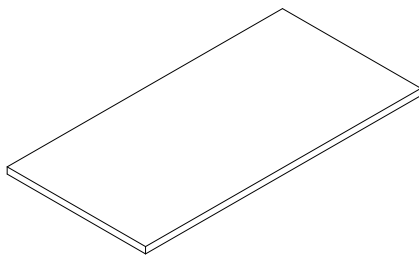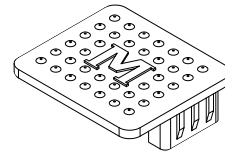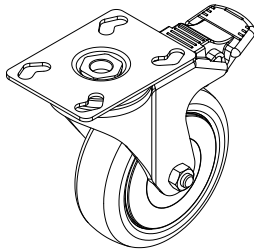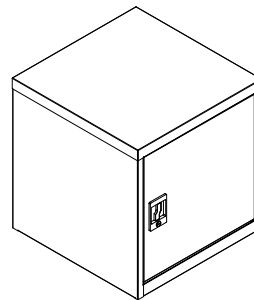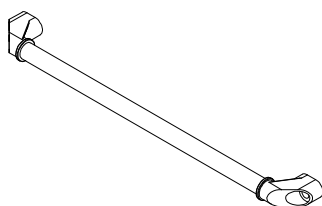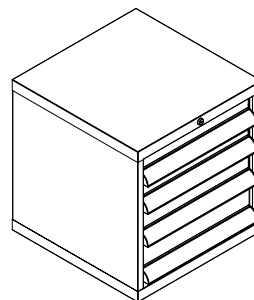**I** Washer**M** M8 x 25 mm allen screw**J** M8 nut**N** Cover for back panel – vertical**K** M5 x 35 mm allen screw**O** Cover for back panel – horizontal**L** M5 nut**P** Cover for table


**Q** M5x40 mm carriage bolt**U** Mesh back panel**R** Wooden shelf**V** End cap**O** Swivel castor with brake**W** Tool cabinet with doors**T** Handle**X** Tool cabinet with drawers

## UPRIGHT ASSEMBLY

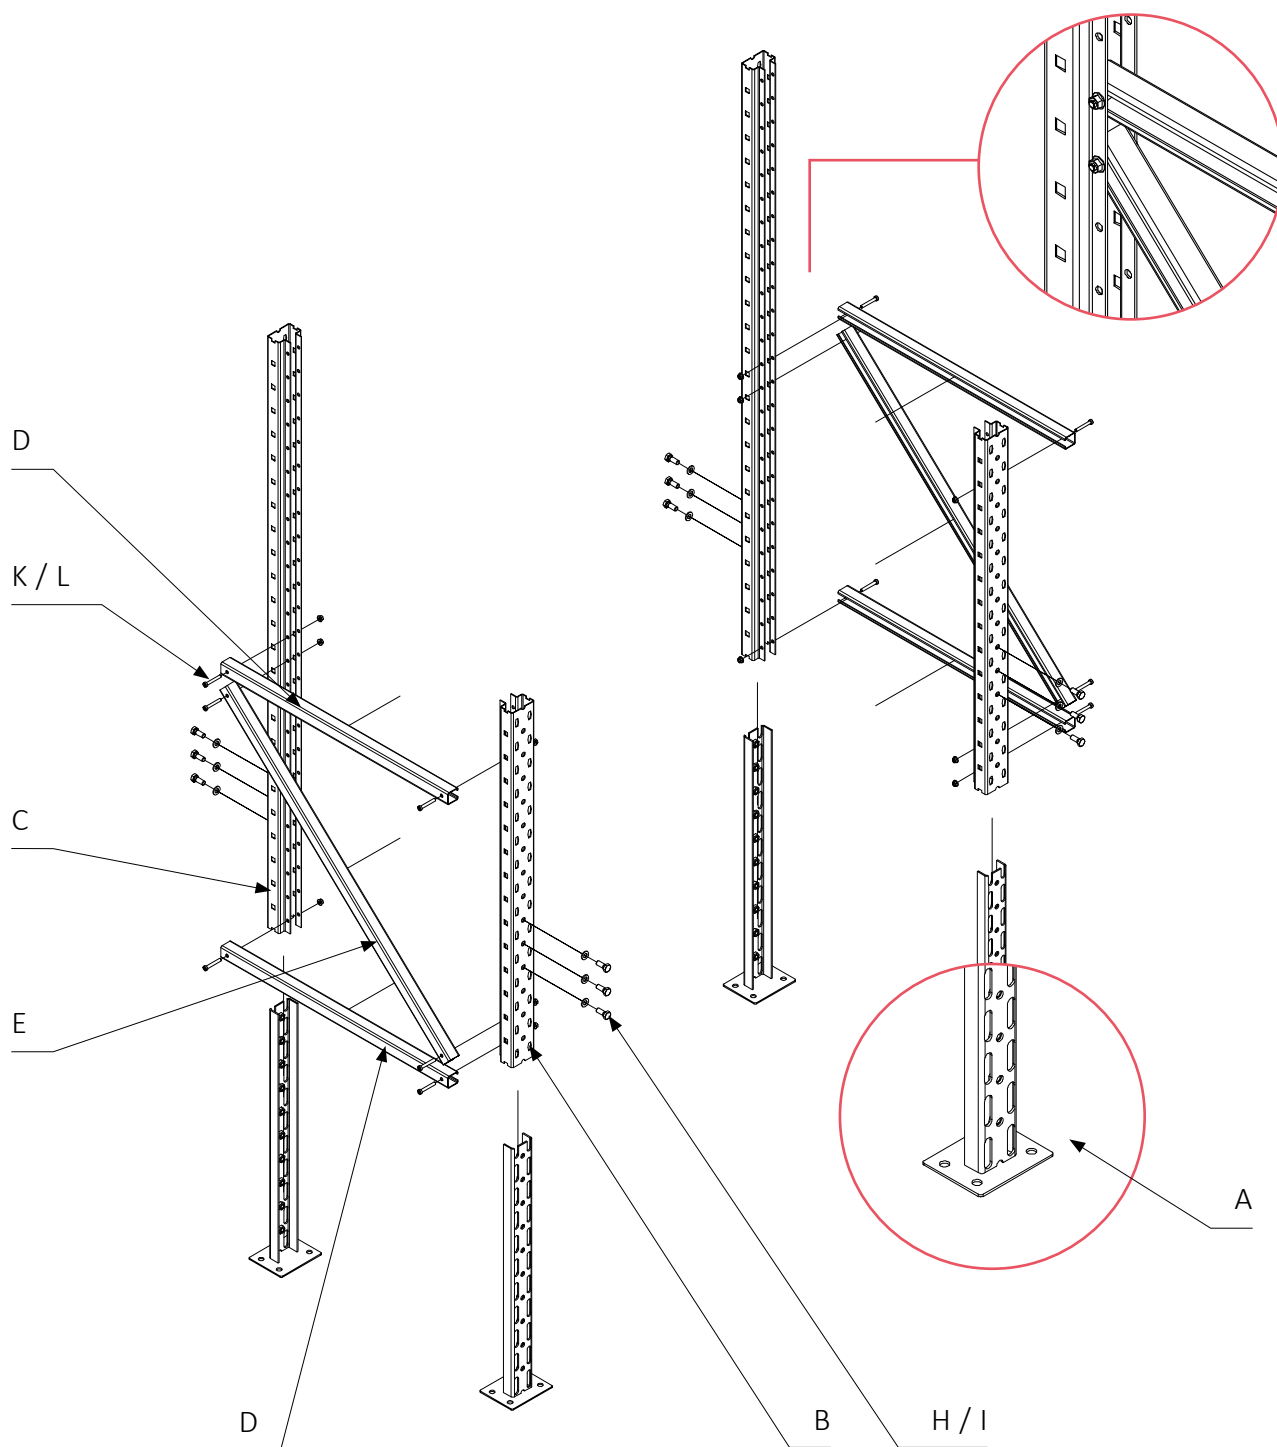


1. Slide upright profile B and C over foot part A and fix using screws H and washers I.
2. Slide braces D and E into upright profile and tighten using bolts K and nuts L.

## ASSEMBLY OF BACK PANEL, COVERS & BEAMS

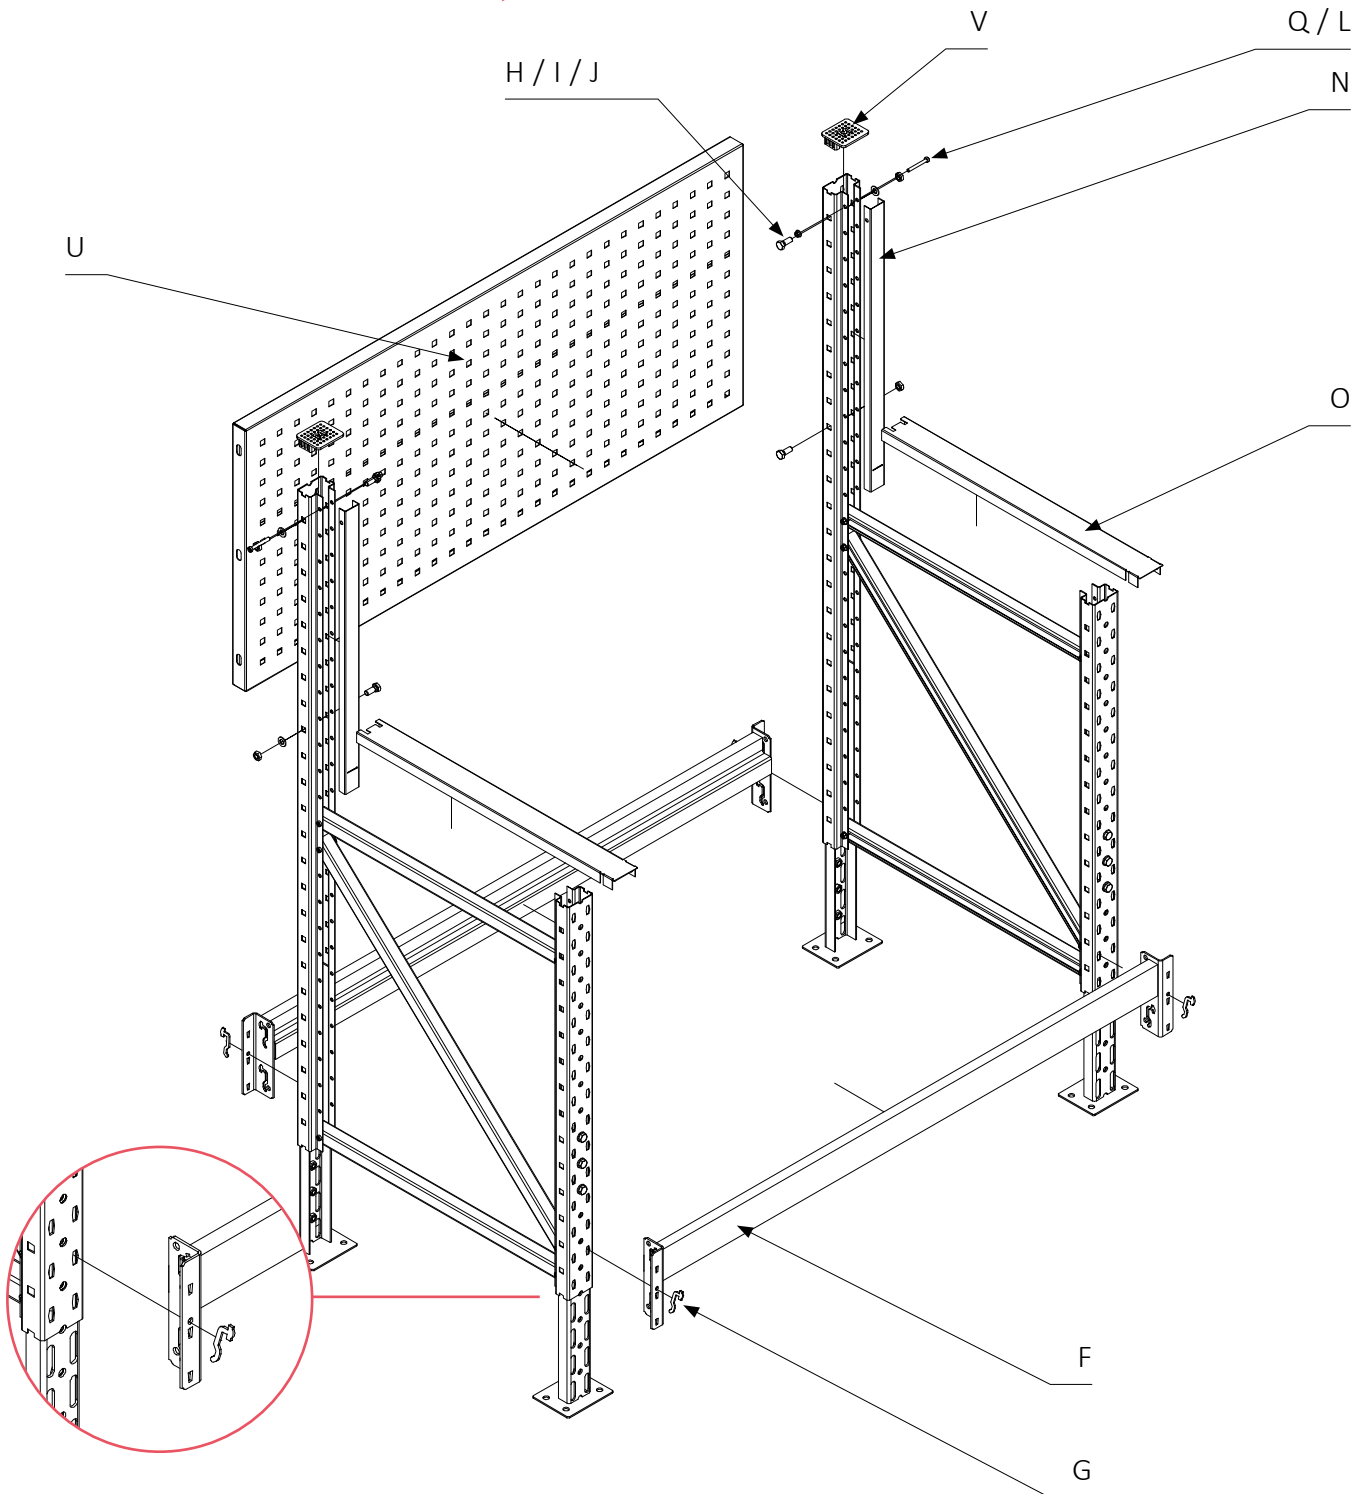

1. Attach beams F to the upright and secure them with safety pin G.
2. Attach back panel U between the rear, taller uprights C with screws H, washers I and nuts J.
3. Position covers N on the rear upright profile and fasten with screw P and nut L. Put on covers O.
4. Insert end cap V.


## SHELF ASSEMBLY

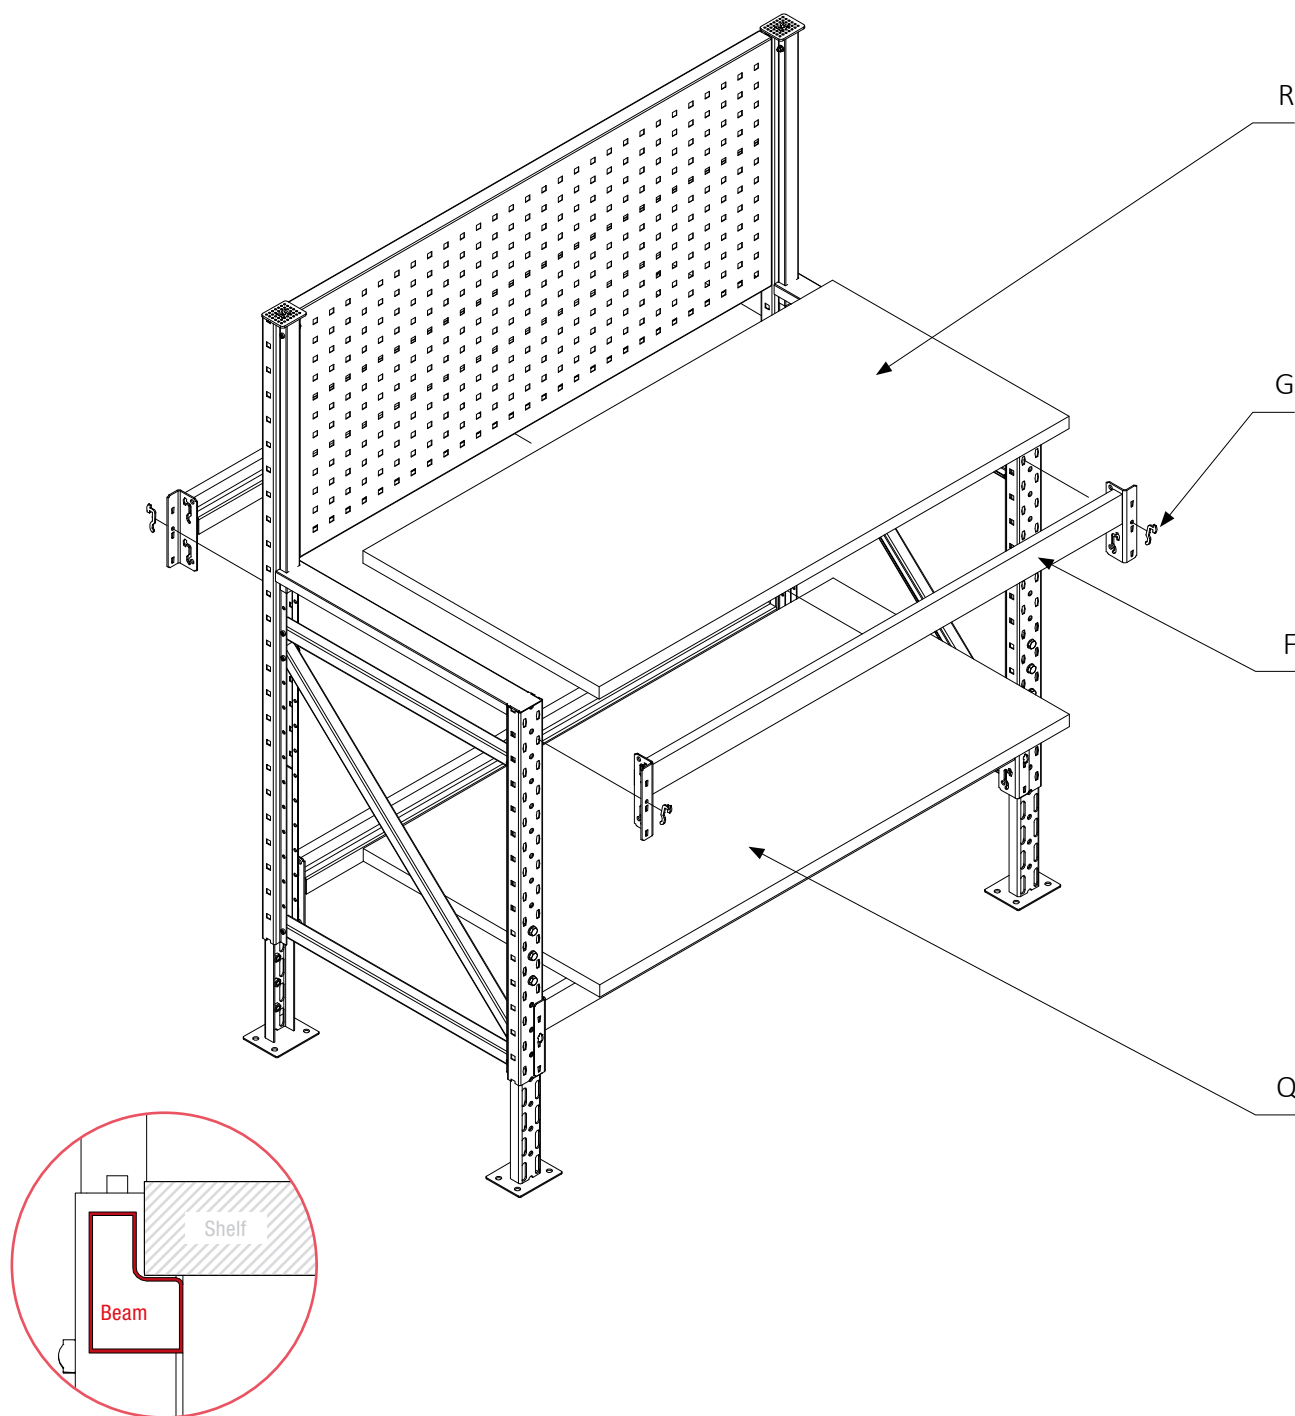

1. Attach beams F to the upright and secure them with safety pin G.
2. Place shelf R onto the stepped beams (self-fixing).




## CABINET MODULES ASSEMBLY

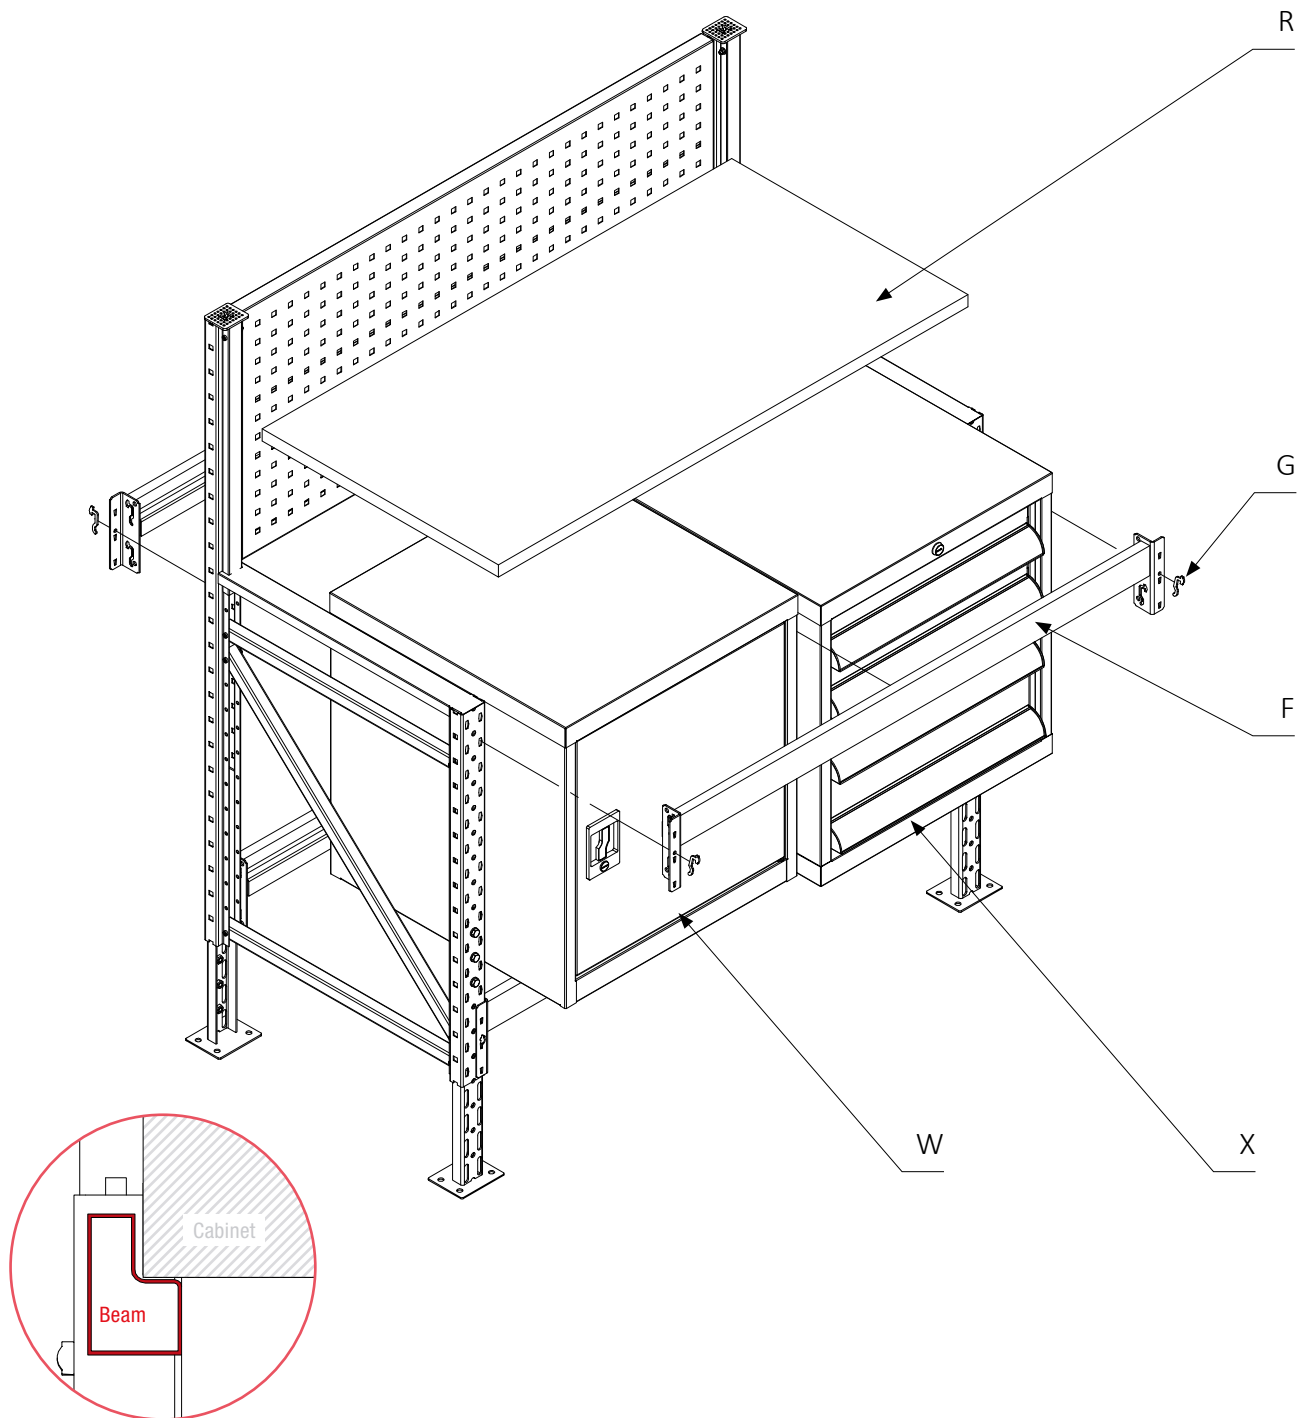


1. Place cabinet modules V and W on the lower stepped beams (self-locking).
2. Attach beams F to the upright and secure them with safety pin G.
3. Place shelf R onto the stepped beams (self-fixing).

## UPRIGHT ASSEMBLY

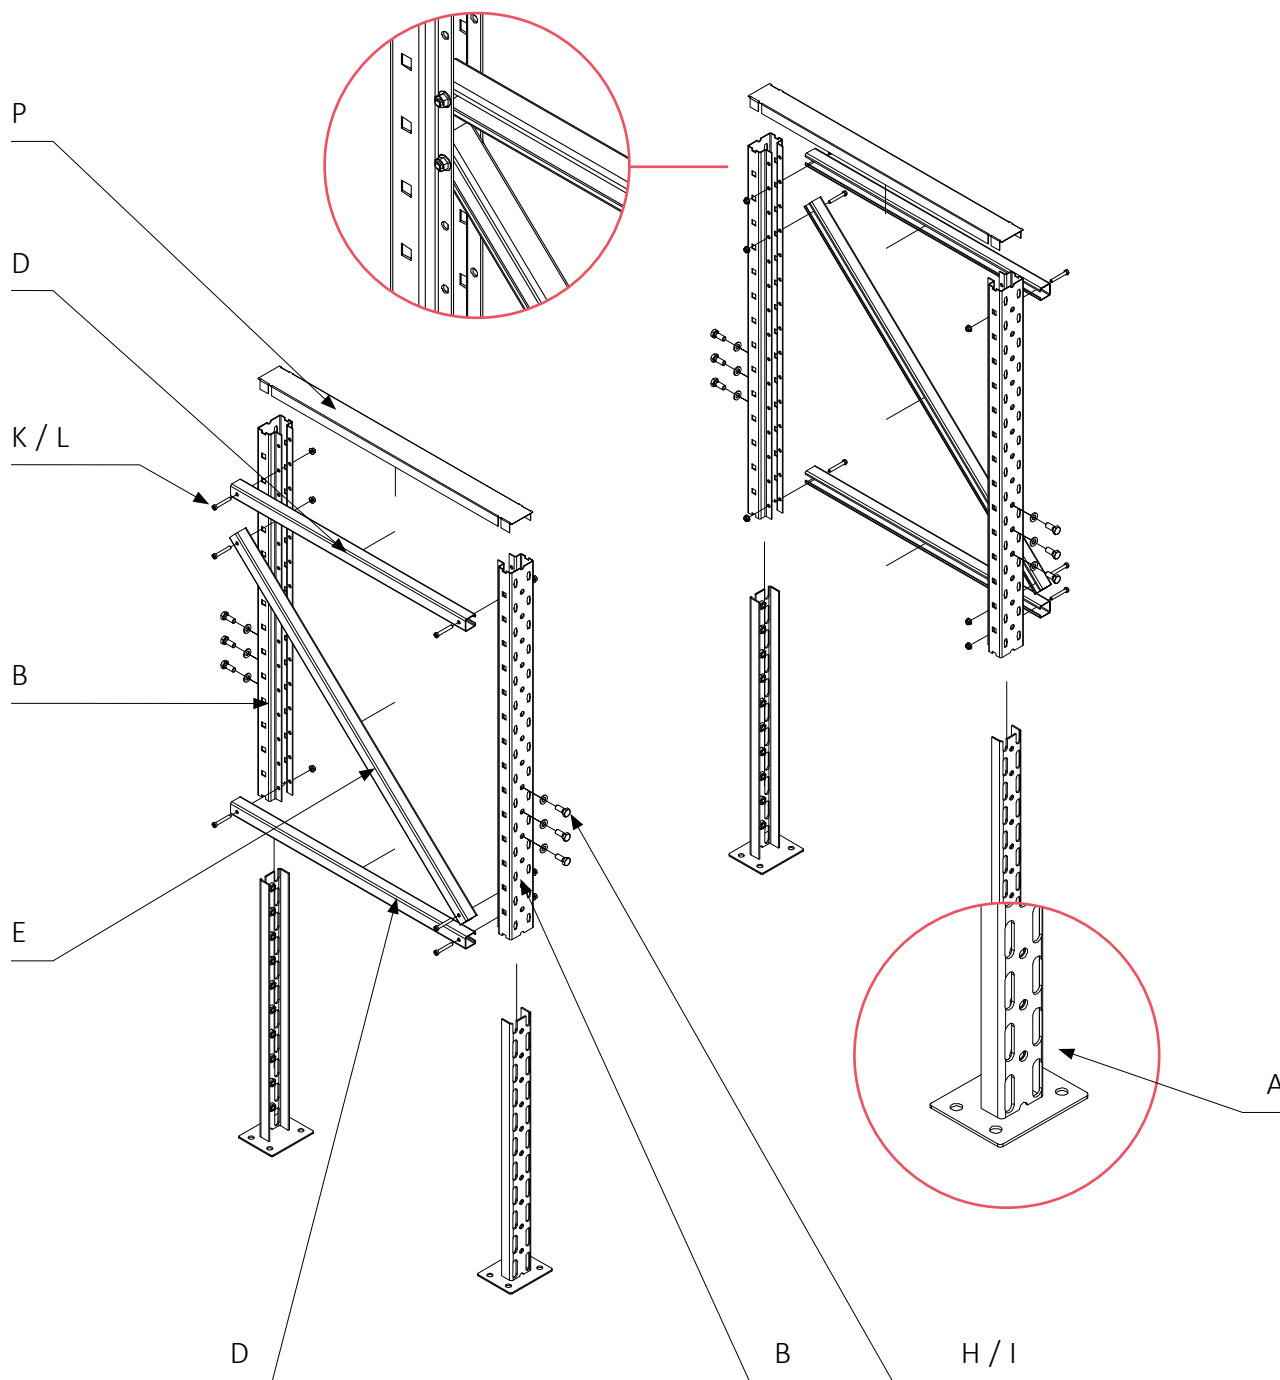


1. Slide upright profile B over foot part A and fix using screws H and washers I.
2. Slide braces D and E into upright profile and tighten using bolts K and nuts L.
3. Attach covers P.

## BEAM &amp; SHELF ASSEMBLY

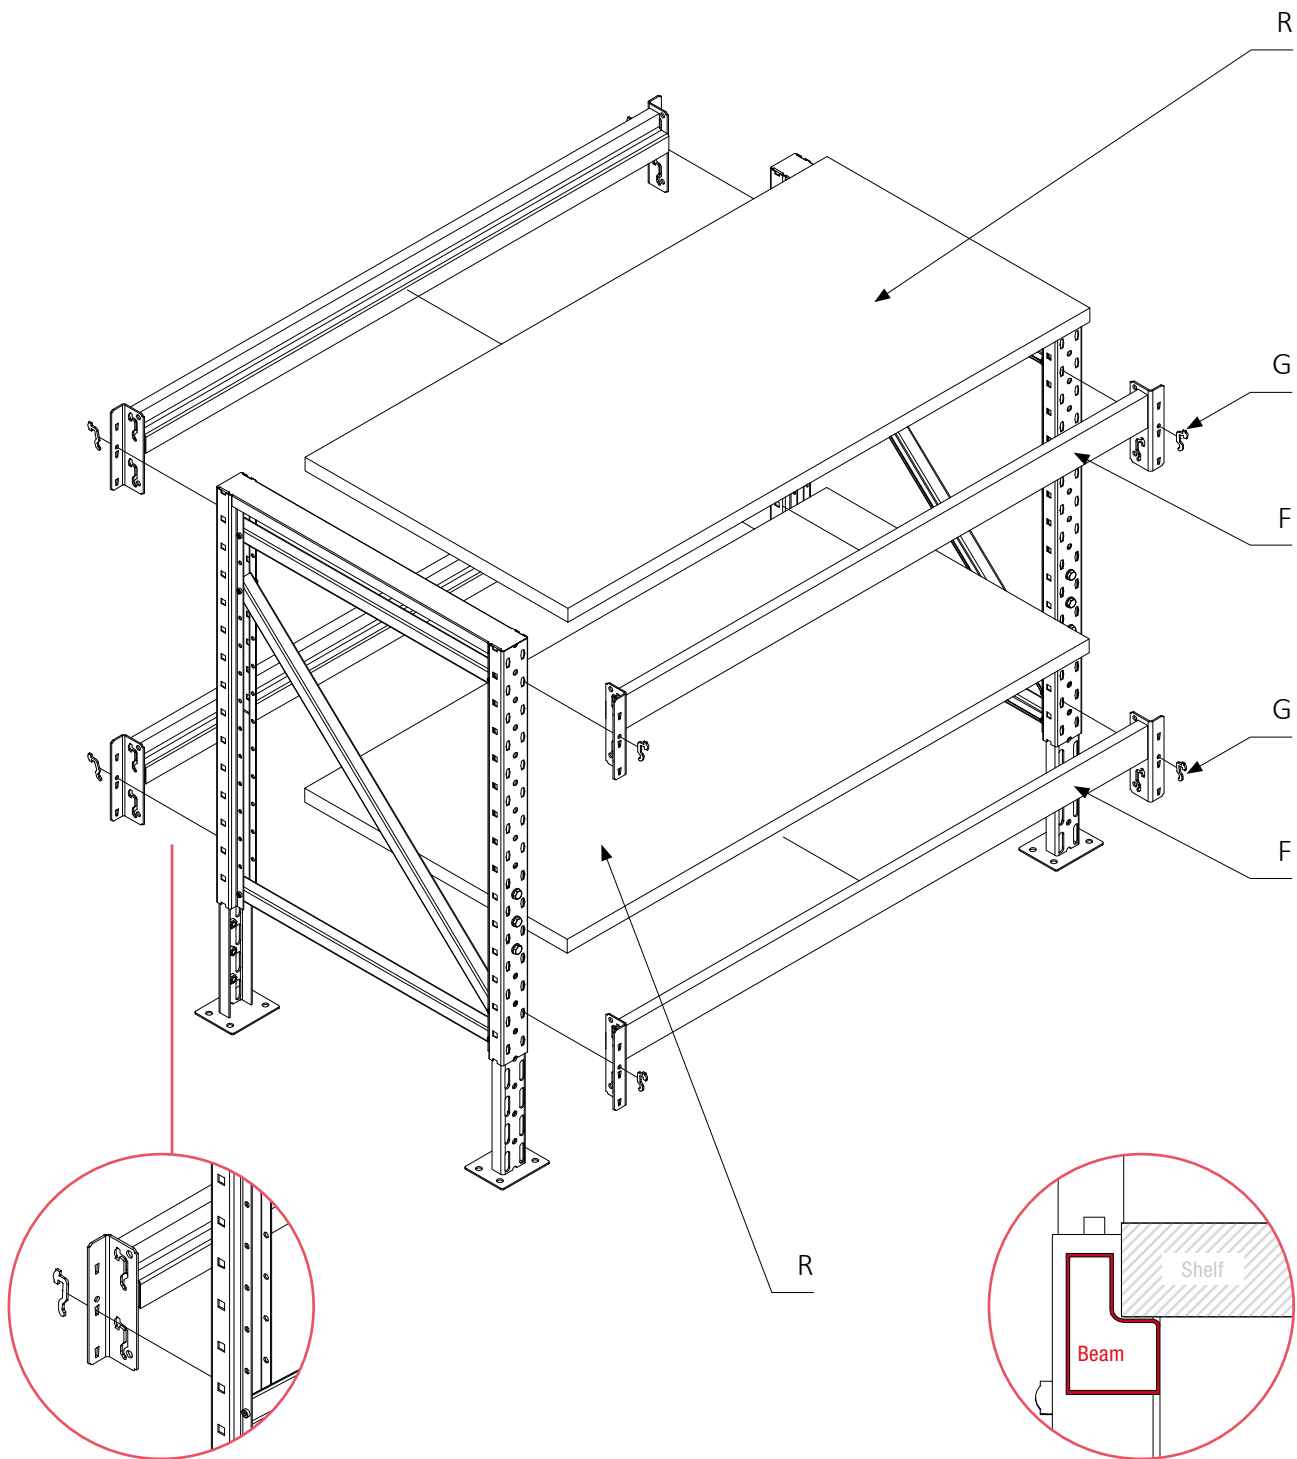


1. Attach beams F to the upright and secure them with safety pin G.
2. Place shelf R onto the stepped beams (self-fixing).

## CABINET MODULES ASSEMBLY

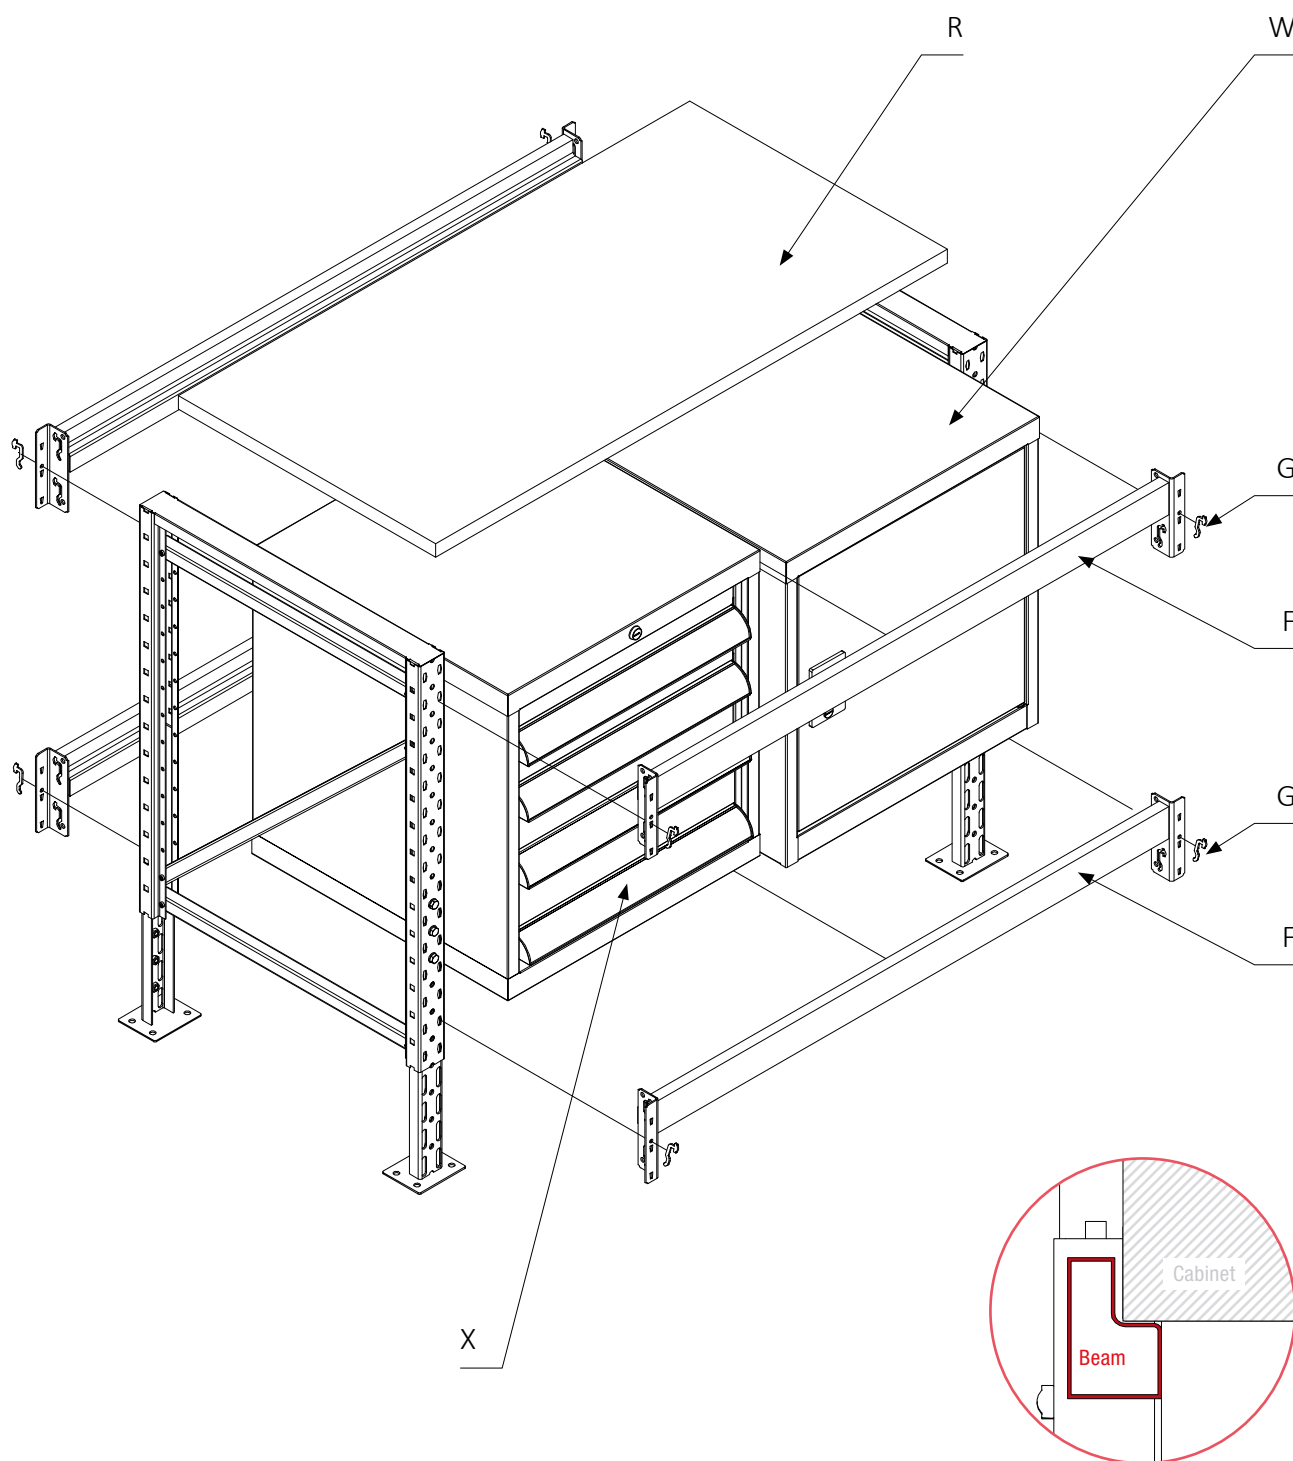

1. Attach lower beams F to the upright and secure them with safety pin G.
2. Place cabinet modules W and X on the lower stepped beams (self-locking).
3. Attach upper beams F to the upright and secure them with safety pin G.
4. Place shelf R onto the stepped beams (self-fixing).

## ASSEMBLY OF CASTORS & HANDLES

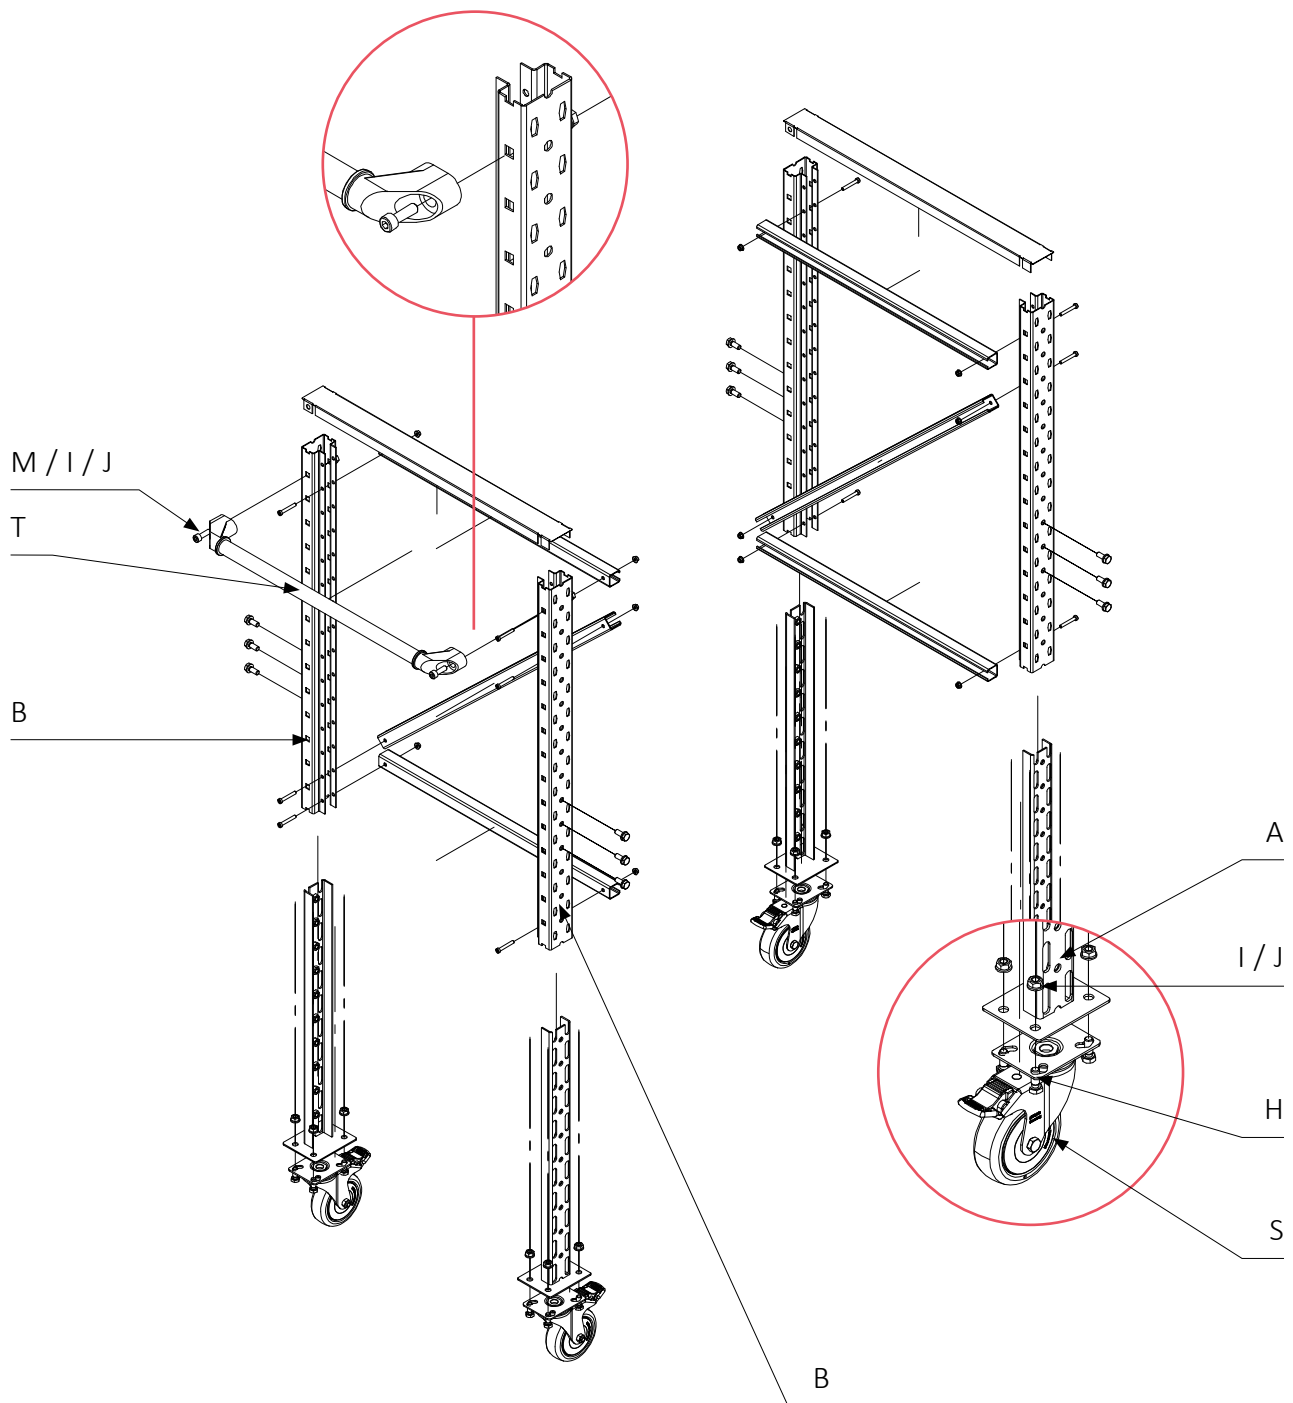

For mobile workbenches, the castors have to be attached as a first step! Then follow the instructions as described.

1. Attach castor S to foot part A with screws H, washers I and nuts J.
2. Assemble the workbench as described (with back panel: p. 6 - 9 / without back panel: p. 10 - 12).
3. Attach handle T with screws M, washers I and nuts J.

## SERVICE & KONTAKT

Contact our product experts and find help and solutions for your product. Here you will find all contact information listed by country and language: [www.topregal.co.uk/en/service](http://www.topregal.co.uk/en/service)

Responsible for the content:

TOPREGAL GmbH

Industriestrasse 3

70794 Filderstadt

GERMANY

[www.topregal.com](http://www.topregal.com)

# TOPREGAL